Via Wizard 3.0
User Manual

Current as of 7/7/09

Contents

Via Wizard 3.0 ..... **1**

User Manual **1**

Current as of 6/8/09 1

1. Revision History 3

2. Introduction 4

2.a Quickstart Instructions 4

2.b Basic Program Operation 4

3. GUI Parameter Description 5

3.a Stackup 5

2.b Padstacks 6

2.c Vias 7

2.d Options 9

2.e Buttons Common to All Tabs 10

3. Design Conventions ..... **Error! Bookmark not defined.**

4. Via Designs 12

5. Advanced Usage ..... **Error! Bookmark not defined.**

5.a Techniques ..... **Error! Bookmark not defined.**

5.b Included Variables ..... **Error! Bookmark not defined.**

5.c Uninstalling ..... **Error! Bookmark not defined.**

6. Known Issues ..... **Error! Bookmark not defined.**

7. Future Improvements ..... **Error! Bookmark not defined.**

1. Revision History

Many edits have been made to the wizard functionality since version 2.0. The latest wizard has been tested and optimized for HFSS v12. The manual has been updated to reflect the new usage. Some of the major edits are listed below:

- Automatically disable/re-enable autosave
- Handle units other than mils
- Options for sweep setup
- Changed Input file format
- Additional port scenarios
- Removed some unnecessary parameters
- Fixed issue with GSSG stackup
- Allow 100% via fill
- Allow faceted structures
- Fixed issue with top/bot planes needing to be solid
- Updated solution settings for HFSS v12
- Add variable to control all antipads per via
- Added ability to change material properties
- Using frequency dependent Dielectric models
- Fixed overall project sizing issues
- Fixed coax sheath size issues
- Coax sheath is now grounded automatically
- Added GUI options for backdrilling
- Added options for automatically deembedding
- Added option for circular anitpads on differential vias
- Added options for mesh operations
- Added option to use a single block of dielectric
- Greyed out don’t care fields of via array inputs
- Added graphics for padstack cross-section
- Added graphics for via array footprint.

2. Introduction

The Via Wizard has been developed to simplify project creation in HFSS v12. Using a straight-forward GUI, a user can enter all parameters necessary to create an arbitrary via array. Most projects will be launched ready to solve in HFSS however the user may easily modify or add to the geometry created by the wizard. Many variable parameters have been added to the project so the user can easily perform parametric analysis. Please refer to the 'Examples' folder in the Via Wizard installation directory for some saved examples of common setups.

Although every effort has been made to ensure accurate projects, the user should verify everything is setup as intended. The Via Wizard is available free of change and may be distributed without a license. Updates will be made available as appropriate and may be downloaded from 3DViaDesign.com or Ansoft.com/ots.

2.a Quickstart Instructions

1. Launch "Via Wizard GUI.exe."
2. Fill in the desired information for each of the tabs: Stackup, Padstack, Via, Options.
3. Click "Generate Project."
4. Typical Via projects are now ready to solve.

2.b Basic Program Operation

The Via Wizard consists of two parts: The "Via Wizard GUI.exe" and "HFSS_via_wizard.exe." The GUI will accept user inputs that describe everything necessary to create an arbitrary via array. After all of the information has been entered, the GUI will generate a text file called "TempFile.txt" that is input into HFSS_via_wizard.exe." This program will then parse the data and generate a VBscript called "HFSS.vbs" that can be read directly into HFSS. Please refer to the "TempFile_format_3.0.xls" for information on the temp file format.

3. GUI Parameter Description

There are three tabs for the GUI used to describe all parameters necessary for the via array. Each of the input parameters is described below:

3.a Stackup

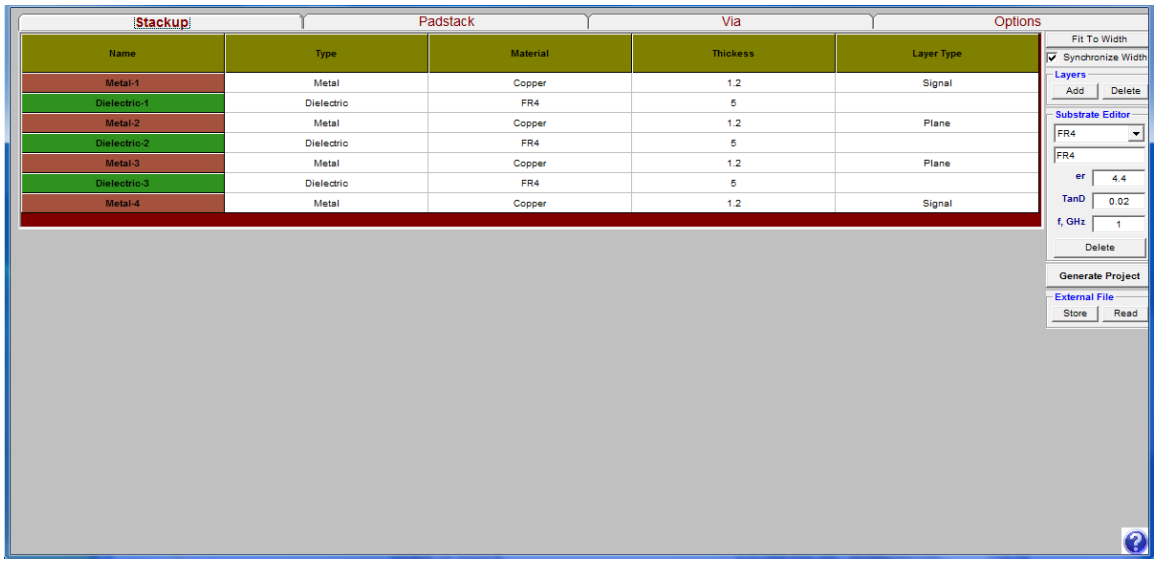

The default project contains 4 Layers. Additional layers can be added to the bottom of the stackup using the **ADD** button on the right. Bottom layers can be removed using the **Delete** button on the right.

Type describes the layer type for the stackup. The stackup always alternates between Metal and Dielectric. The top and bottom layers are always Metal

Material describes the material properties that will be used in HFSS. By default Copper is used for Metal layers and FR4 is used for Dielectric layers. To change the material on a particular layer, select it from the pull down menu. Different dielectrics can be added to the pull down menu by using the substrate editor to the right

Thickness describes the layer thickness in mils. The default stackup uses 1-oz copper with 5 mil dielectric.

Layer Type describes which layers are signals and which layers contain planes. To change the type, select it from the pull down menu. A valid project must contain at least one plane.

Substrate Editor is used to add and edit dielectric materials. User specifies *Er, TanD* and measurement *frequency*. When The HFSS model is created a frequency dependent Djordjevic-Sarkar dielectric model will be added to the project using the *Er* and *TanD* as a name

2.b Padstacks

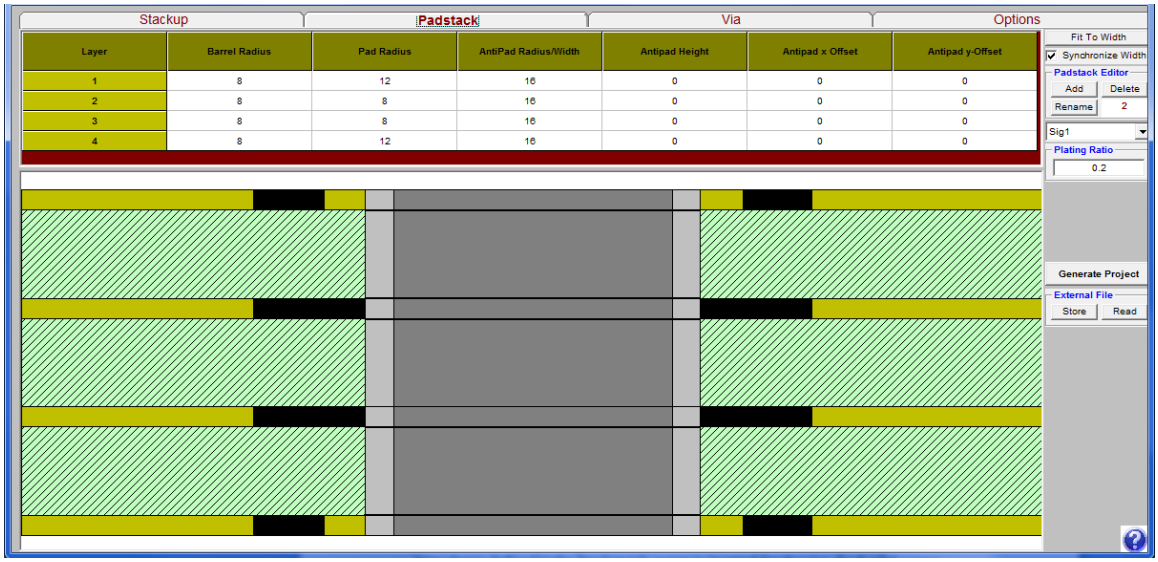

The padstack display changes based on the number of layers defined. For each Metal layer that is defined in the Stackup tab, a row is inserted for the vias. Each of the rows may be defined independent of each other. By default, two padstacks have been defined. Choose the padstack you would like to edit using the *Padstack Pull Down Menu* on the right. Padstacks can be renamed by using the **Rename** button on the right. Padstacks may be added or deleted using the **Add** and **Delete** buttons on the right. In the lower right corner you can define the **Plating Ratio** for each padstack. This is the ratio of Plating Metal to Drill Size. The default value is 0.2 and must be between 0 and 1.

Layer describes the metal layer that is described by the padstack.

Barrel Radius describes the radius of the via drill hole. This is maximum radius of the plated through hole.

Pad Radius describes the pads on each layer. By default the radius is set equal to the Barrel Radius indicating no pad exists on the internal layers. On the external layers the default pad size is set to 12 mils.

Antipad Radius/Width describes either the radius of circular antipads or the width of rectangular antipads. Circular antipads are drawn if Antipad Height is 0, otherwise a rectangular antipad is drawn. By default circular antipads are defined that are 16 mils.

Antipad Height describes the height of rectangular antipads. This value should be set to 0 to describe circular antipads.

Antipad X Offset describes the x offset from the center of the via barrel. This offset is applied to the center of circular antipads or the middle of the rectangular antipad's width.

The default for this value is 0, meaning the antipad is perfectly centered about the via barrel.

Antipad Y Offset describes the y offset from the center of the via barrel. This offset is applied to the center of circular antipads or the middle of the rectangular antipad's height.

2.c Vias

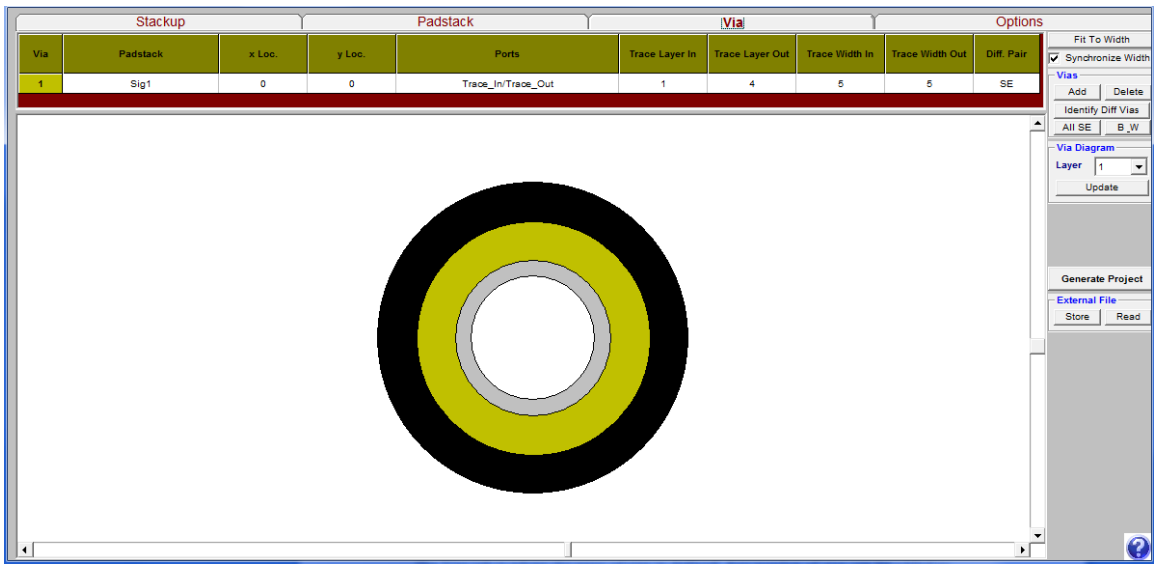

The Vias tab is where the array of vias is defined. Any number of vias can be added to the project by clicking the **Add** button on the right. You may delete the last via added by using the **Delete** button. If you like to delete a via other than the last one added, select the via by clicking on the number in the leftmost column and click **Delete**. If some vias have been paired together as a differential pair, you can color code them by clicking **Identify Diff Vias**. If you would like to remove the color coding, select **B_W**. You can convert all differential vias to single ended by clicking **All SE**. You must convert all vias to single ended in order to delete a via from the array.

Via describes the number of the via.

Padstack is a list of all available padstacks as previously defined. Select the desired padstack from the pull down menu.

X Loc is the x location of the via center on a Cartesian plane.

Y Loc is the x location of the via center on a Cartesian plane.

Ports is a pull down menu which allows you select the type of port associated with that via. Choices are *None*, *Trace in/Trace out*, and *Coax_Launch_Top, Trace_In/None_Out, Trace Out/None_In, Coax_Launch_Bot, Coax_Launch_Top/None_out, Coax_launch_Bot/None_out, Ground* and *Coax_In/Coax_out*

None only places a via and does not attach a port. Use this selection for Ground vias or unconnected signal vias.

Trace in-Trace out draws two traces that connect to the via. Traces are always drawn in the +/- X direction. The trace into the via goes from the highest X extents of the project to the via. The trace out of the via goes from the via to the lowest X extents of the project. Wave ports are used as excitations.

Coax Launch Top draws a coax launch from the top of the project into the via. This is similar to a press-fit connector. A trace is also drawn out of the via escaping to the lowest X extents of the project. Wave ports are used for excitations.

Trace in / None Out only draws the trace in. It is assumed the user will manually add the escape.

Trace Out / None In only draws the trace out. It is assumed the user will manually add the escape.

Coax Launch Bot draws a coax launch from the bottom of the structure as well as a trace escaping in the X direction

Coax Launch Top / None Out draws a coax launch from the top but no trace escaping the via. It is assumed the user will manually add the escape.

Coax Launch Bot / None Out draws a coax launch from the bottom but no trace escaping the via. It is assumed the user will manually add the escape.

Ground this setting assigns no ports to the via but rather is used for grounding the coax sheath during coax launches. All vias specified as ground will be shorted together using a PEC sheet and connected to the outer sheath of the launching coaxes. This setting is the same as *None* if no coax launches are specified.

Coax In / Coax Out draws a coax launches from the top and bottom of the same via. This launch is useful when evaluating via performance independent of traces.

Trace In Layer defines the layer the trace is drawn coming into the via. Only signal layers are displayed in the pull down menu.

Trace Out Layer defines the layer the trace is drawn escaping from via. Only signal layers are displayed in the pull down menu.

Trace In Width defines the nominal width of the trace into the via. Traces are drawn as trapezoids to capture over etching. The value defined here is used as the base of the trapezoid with the top oriented upward.

Trace Out Width defines the nominal width of the trace escaping the via. Traces are drawn as trapezoids to capture over etching. The value defined here is used as the base of the trapezoid with the top oriented downward.

Diff Pair defines which vias are paired together. Pairing vias together will draw an antipad that surrounds both vias and also link the escape routing together. For more details, please refer to **Differential Vias** in the *Via Designs* section.

2.d Options

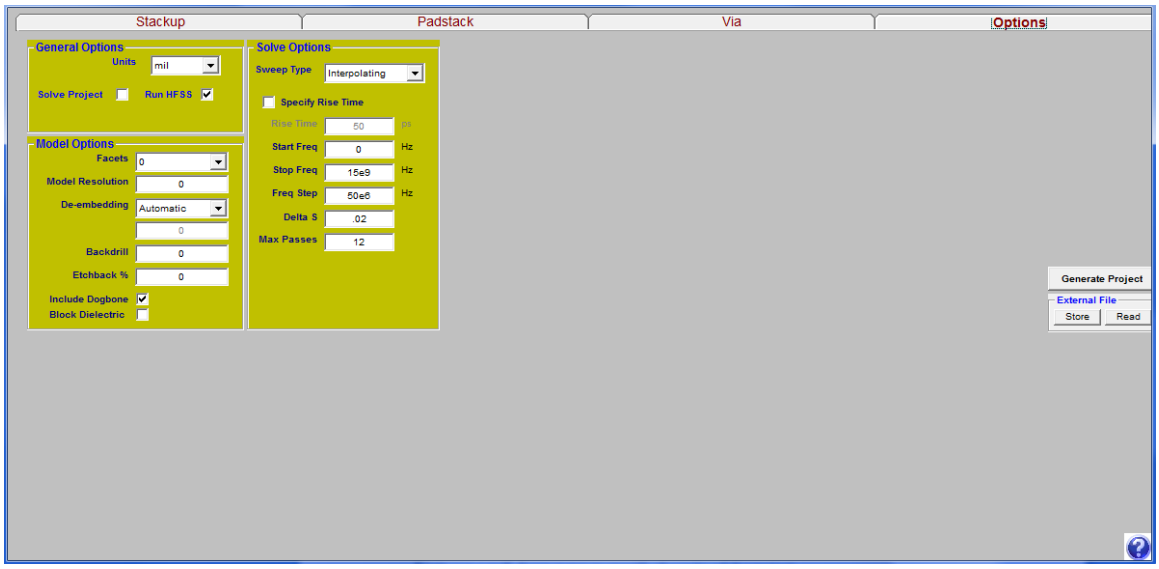

In the Options tab different settings can be applied to the creation of the HFSS project. The different options include General Options, Model Options and Solve Options.

Units use a pull down menu to specify the units of the project

Solve Project will automatically start the HFSS simulation if this box is checked.

Run HFSS will automatically launch and create the project if this box is checked

Facets controls the number of facets to apply to all cylindrical structures. 0 facets will create a true cylinder.

Model Resolution will create a model resolution mesh operation on all vias with the length specified by the user. If the length is 0 no mesh operation will be applied.

De-embedding User may choose, *Automatic*, *None*, or *Specified*. If automatic is selected, the wizard will attempt to set the de-embedding length to be the distance from the port to the start of the antipad on the adjacent plane. *None* will leave the ports not de-embedded. *Specified* will activate an new field in which the user can specify the de-embedding distance.

Backdrilling if this is checked a variable will be added to the HFSS project that will backdrill the bottom of all vias that have a port attached to them. The length of the backdrill depth will be set using the user specified field

Etchback % is the percentage of metal thickness that is removed from the top or bottom of the trace. 0% will produce a rectangular trace while 1%-200% will create trapezoidal traces.

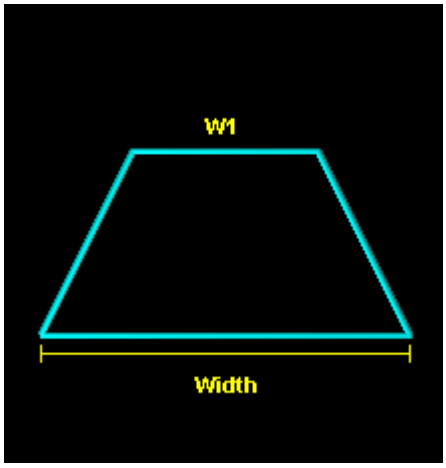

W1 = Width – Etchback% * Thickness

Include Dogbone will create an oblong antipad for differential vias. If this is unchecked the differential antipads will be determined by the individual vias antipads.

Block Dielectric will create a single box for all dielectric rather than individual layers. Material properties are chosen based on Layer1 Dielectric. This can be helpful to optimize speed if simulating a PCB with many layers.

Sweep Type allows the user to specify *Discrete* or *Interpolating* for the sweep that is created in HFSS.

Specify Risetime will automatically compute the max frequency necessary to resolve the risetime specified. Bandwidth is computed based on the knee frequency ~ .35/Tr.

Start Frequency is the minimum frequency specified in the HFSS sweep

Stop Frequency is the maximum frequency specified for the HFSS sweep as well as the mesh frequency

Freq Step is the interval between frequencies solved by HFSS

Delta S is the maximum allowable change in computed S parameters between adaptive passes. If the computed s-parameters change more than the allowed Delta S, HFSS continues to adaptively mesh.

Max Pass will limit the total adaptive passes HFSS is allowed if the target Delta S is not achieved.

2.e Buttons Common to All Tabs

Some buttons are available for use on each of the tabs.

Fit to Width scales the columns to match the width of the GUI window.

Synchronize Width scales the width of the columns are the window is resized.

Store will save the current configuration as a text file. Data from all three tabs will be saved.

Read will load a saved Via Wizard project. Data from all three tabs will be restored.

Generate Project will create the “HFSS.vbs” file that can be imported into HFSS. The file is saved in the Via Wizard project directory. To load it manually, select *Tools->Run Script* in HFSS and point to this file. If the **Run HFSS** button is checked in the options tab, HFSS will be launched and the script automatically loaded.

? is a help button that directs you to this manual and also informs you of the release date.

4. Via Designs

Just about any type of via or array can be designed using the wizard. For any exotic cases, the Via Wizard may be used as a starting point. Below are a few examples of via projects and how they are created

Signal Vias

-Circular antipads can be drawn by entering Radius and “0” for Antipad Height
-Square antipads can be drawn by entering Width and Height

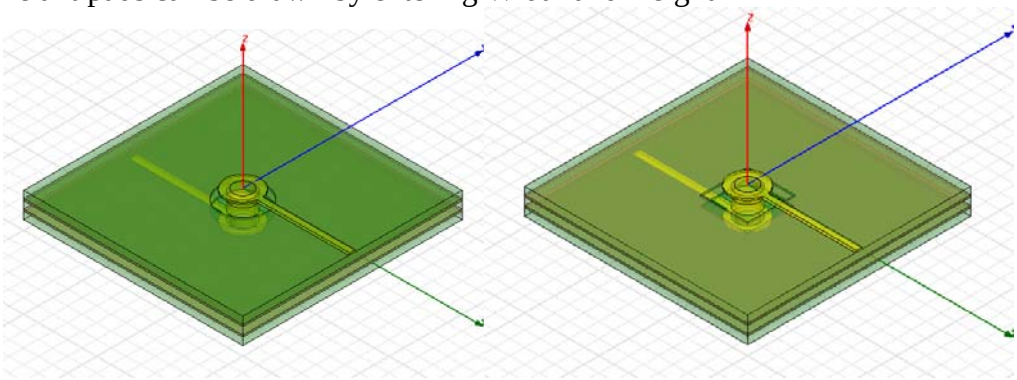

Connector Footprint

-Define pitch using X, Y locations of Ground and Signal vias
-Use Coax launch to emulate a press fit connector

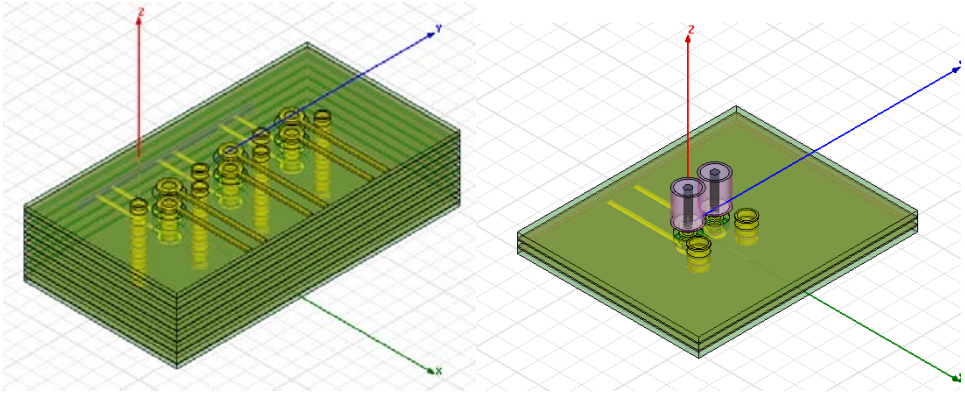

Differential Vias

-Defining Diff Pairs in the GUI will create an elliptical antipad between the two vias. The antipad dimensions will be based on the antipad radius of the via with the lowest Y location.
-Unchecking “Dogbone” option will create individual antipads for vias
-Dogbone has been parameterized

-Set pad/antipad to 0 if you don't want dogbone on layers
-Differential routing has been parameterized
-Trace spacing based on trace width of first via
-Location of meeting point for traces based on the antipad of that layer.

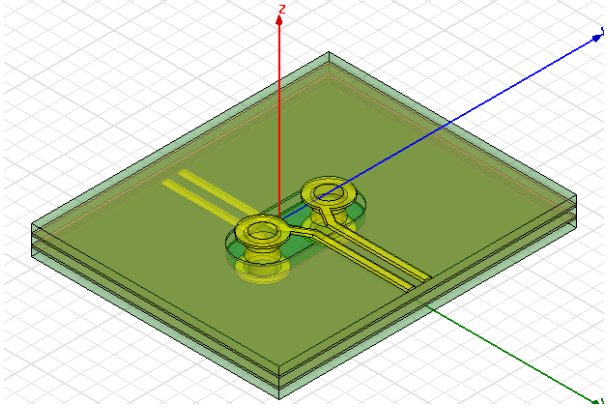

Stub Vias

-Typical PTH via
-Enter the same via Barrel radius on all layers.
-Enter trace out or trace in layer to be an internal layer

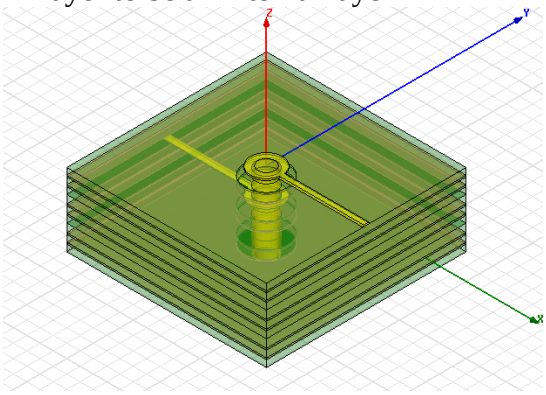

Blind Vias

-Blind vias can be created by entering a barrel thickness of "0" on the null layers.

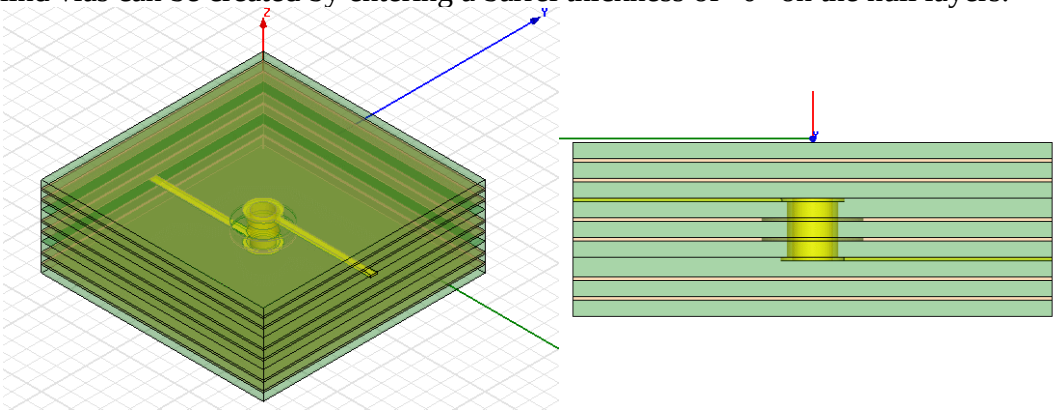

Backdrilled Vias

-Backdrilling can be investigated by changing the "Via#_backdrill" variable in HFSS

-Ensure “Backdrilled” option is checked
-Only vias with ports associated with them contain the backdrill variable

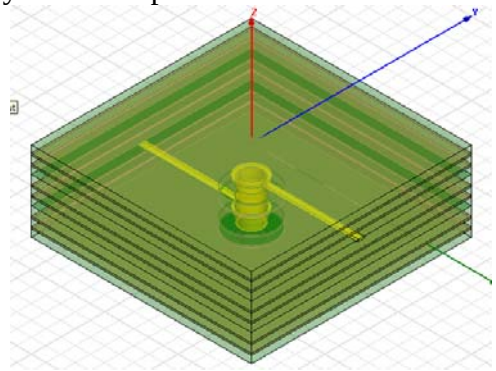

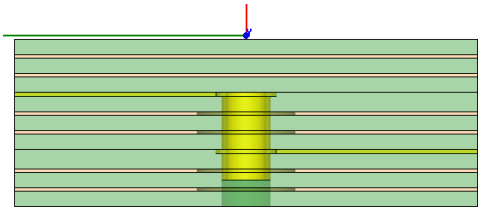

Ground Vias

-Ground vias can be created by specifying an antipad of “0” on desired plane layer

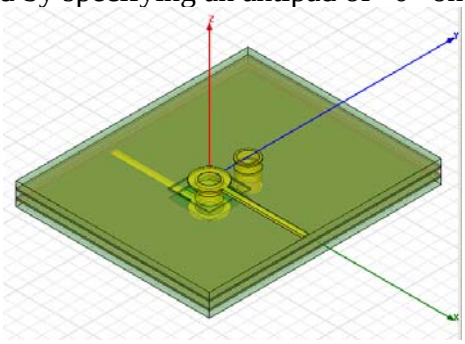

Non-Functional Pads

-To remove non-functional pads set pad radius to barrel radius

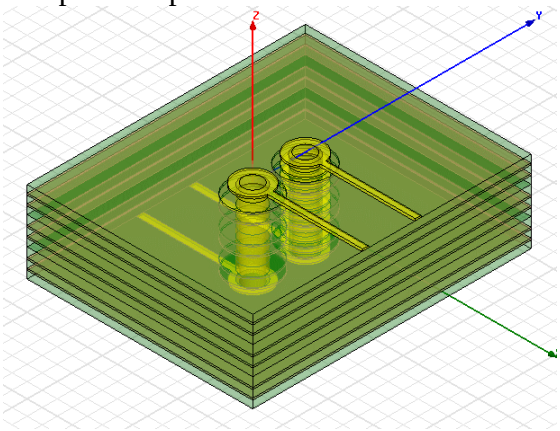

射 频 和 天 线 设 计 培 训 课 程 推 荐

易迪拓培训(www.edatop.com)由数名来自于研发第一线的资深工程师发起成立，致力并专注于微波、射频、天线设计研发人才的培养；我们于 2006 年整合合并微波 EDA 网(www.mweda.com)，现已发展成为国内最大的微波射频和天线设计人才培养基地，成功推出多套微波射频以及天线设计经典培训课程和 ADS、HFSS 等专业软件使用培训课程，广受客户好评；并先后与人民邮电出版社、电子工业出版社合作出版了多本专业图书，帮助数万名工程师提升了专业技术能力。客户遍布中兴通讯、研通高频、埃威航电、国人通信等多家国内知名公司，以及台湾工业技术研究院、永业科技、全一电子等多家台湾地区企业。

易迪拓培训课程列表：http://www.edatop.com/peixun/rfe/129.html

射频工程师养成培训课程套装

该套装精选了射频专业基础培训课程、射频仿真设计培训课程和射频电路测量培训课程三个类别共 30 门视频培训课程和 3 本图书教材；旨在引领学员全面学习一个射频工程师需要熟悉、理解和掌握的专业知识和研发设计能力。通过套装的学习，能够让学员完全达到和胜任一个合格的射频工程师的要求…

课程网址：http://www.edatop.com/peixun/rfe/110.html

ADS 学习培训课程套装

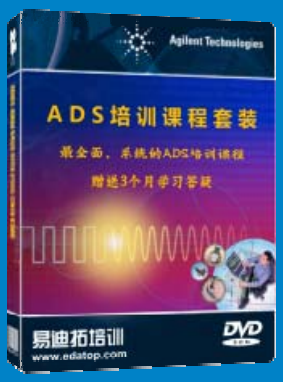

该套装是迄今国内最全面、最权威的 ADS 培训教程，共包含 10 门 ADS 学习培训课程。课程是由具有多年 ADS 使用经验的微波射频与通信系统设计领域资深专家讲解，并多结合设计实例，由浅入深、详细而又全面地讲解了 ADS 在微波射频电路设计、通信系统设计和电磁仿真设计方面的内容。能让您在最短的时间内学会使用 ADS，迅速提升个人技术能力，把 ADS 真正应用到实际研发工作中去，成为 ADS 设计专家...

课程网址： http://www.edatop.com/peixun/ads/13.html

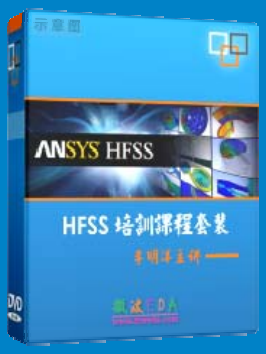

HFSS 学习培训课程套装

该套课程套装包含了本站全部 HFSS 培训课程，是迄今国内最全面、最专业的 HFSS 培训教程套装，可以帮助您从零开始，全面深入学习 HFSS 的各项功能和在多个方面的工程应用。购买套装，更可超值赠送 3 个月免费学习答疑，随时解答您学习过程中遇到的棘手问题，让您的 HFSS 学习更加轻松顺畅…

课程网址：http://www.edatop.com/peixun/hfss/11.html

CST 学习培训课程套装

该培训套装由易迪拓培训联合微波 EDA 网共同推出，是最全面、系统、专业的 CST 微波工作室培训课程套装，所有课程都由经验丰富的专家授课，视频教学，可以帮助您从零开始，全面系统地学习 CST 微波工作的各项功能及其在微波射频、天线设计等领域的设计应用。且购买该套装，还可超值赠送 3 个月免费学习答疑…

课程网址：http://www.edatop.com/peixun/cst/24.html

HFSS 天线设计培训课程套装

套装包含 6 门视频课程和 1 本图书，课程从基础讲起，内容由浅入深，理论介绍和实际操作讲解相结合，全面系统的讲解了 HFSS 天线设计的全过程。是国内最全面、最专业的 HFSS 天线设计课程，可以帮助您快速学习掌握如何使用 HFSS 设计天线，让天线设计不再难…

课程网址：http://www.edatop.com/peixun/hfss/122.html

13.56MHz NFC/RFID 线圈天线设计培训课程套装

套装包含 4 门视频培训课程，培训将 13.56MHz 线圈天线设计原理和仿真设计实践相结合，全面系统地讲解了 13.56MHz 线圈天线的工作原理、设计方法、设计考量以及使用 HFSS 和 CST 仿真分析线圈天线的具体操作，同时还介绍了 13.56MHz 线圈天线匹配电路的设计和调试。通过该套课程的学习，可以帮助您快速学习掌握 13.56MHz 线圈天线及其匹配电路的原理、设计和调试…

详情浏览：http://www.edatop.com/peixun/antenna/116.html

我们的课程优势：

※ 成立于 2004 年，10 多年丰富的行业经验，

※ 一直致力并专注于微波射频和天线设计工程师的培养，更了解该行业对人才的要求

※ 经验丰富的一线资深工程师讲授，结合实际工程案例，直观、实用、易学

联系我们：

※ 易迪拓培训官网：http://www.edatop.com

※ 微波 EDA 网：http://www.mweda.com

※ 官方淘宝店：http://shop36920890.taobao.com